AiM Infotech

Renault Megane III RS From 2008 onwards

Release 1.00







This tutorial explains how to connect Renault Megane III RS to AiM devices. Supported models are:

• Renault Megane III RS

from 2008 onwards

1


OBDII connection

Renault Megane III RS is equipped with an OBDII connector. The OBDII plug is located behind a plastic panel below the USB plug.





Connector pinout as well as connection table are shown here below.

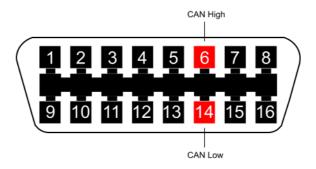

| OBDII connector pin | Pin function | AiM cable |
|---------------------|--------------|-----------|
| 6 | CAN High | CAN+ |
| 14 | CAN Low | CAN- |



2

AiM Logger configuration

Once the ECU connected to the logger set up the logger as follows.

Run Race Studio 2 software and select:

- "Device Configuration" -> select the device you are using
- select the configuration or press "New" to create a new one
- select ECU manufacturer "Renault" and ECU Model "Megane_R3_RS"
- transmit the configuration to the device pressing "Transmit".



3

Available channels

Channels received by AiM loggers connected to Megane_R3_RS protocol are:

| ID | CHANNEL NAME | FUNCTION |
|--------|------------------|-----------------------------------|
| ECU_1 | ECU_RPM | RPM |
| ECU_2 | ECU_MAN_AIR_PRE | Manifold air pressure |
| ECU_3 | ECU_THROTTLE | Throttle position |
| ECU_4 | ECU_STEER_ANG | Steering angle |
| ECU_5 | ECU_STEER_SPD | Steering speed |
| ECU_6 | ECU_DASH_SPD | Dash speed |
| ECU_7 | ECU_WSPD_FL | Front Left wheel speed |
| ECU_8 | ECU_WSPD_FR | Front Right wheel speed |
| ECU_9 | ECU_WSPD_RL | Rear Left Wheel speed |
| ECU_10 | ECU_WSPD_RR | Rear Right Wheel speed |
| ECU_11 | ECU_VEH_SPD | Vehicle speed |
| ECU_12 | ECU_BRAKE_SW | Brake switch |
| ECU_13 | ECU_BRAKE_PRES | Brake pressure |
| ECU_14 | ECU_CLUTCH | Clutch switch |
| ECU_15 | ECU_HAND_BRK | Handbrake |
| ECU_16 | ECU_ENG_TEMP | Engine Coolant Temperature |
| ECU_17 | ECU_INT_AIR_TEMP | Intake Air Temperature |
| ECU_18 | ECU_PEDAL_POS | Pedal position |
| ECU_19 | ECU_KICK_SW | Kick switch |
| ECU_20 | ECU_NEUTRAL | Neutral signal |
| ECU_21 | ECU_ABS_ESP_off | ABS ESP Off |
| ECU_22 | ECU_TURN_LEFT | Left turn indicator light |
| ECU_23 | ECU_TURN_RIGHT | Right turn indicator light |
| ECU_24 | ECU_POS_LIGHT | Position light |
| ECU_25 | ECU_LIGHT | Low beam |