



## Expansions


# Displaying lambda value on SmartyCam HD

### Question:

How can I show Lambda value in my SmartyCam HD overlay?

### Answer:

To overlay the lambda value just choose "dgt" overlay in the SmartyCam Configuration main page (red box below).

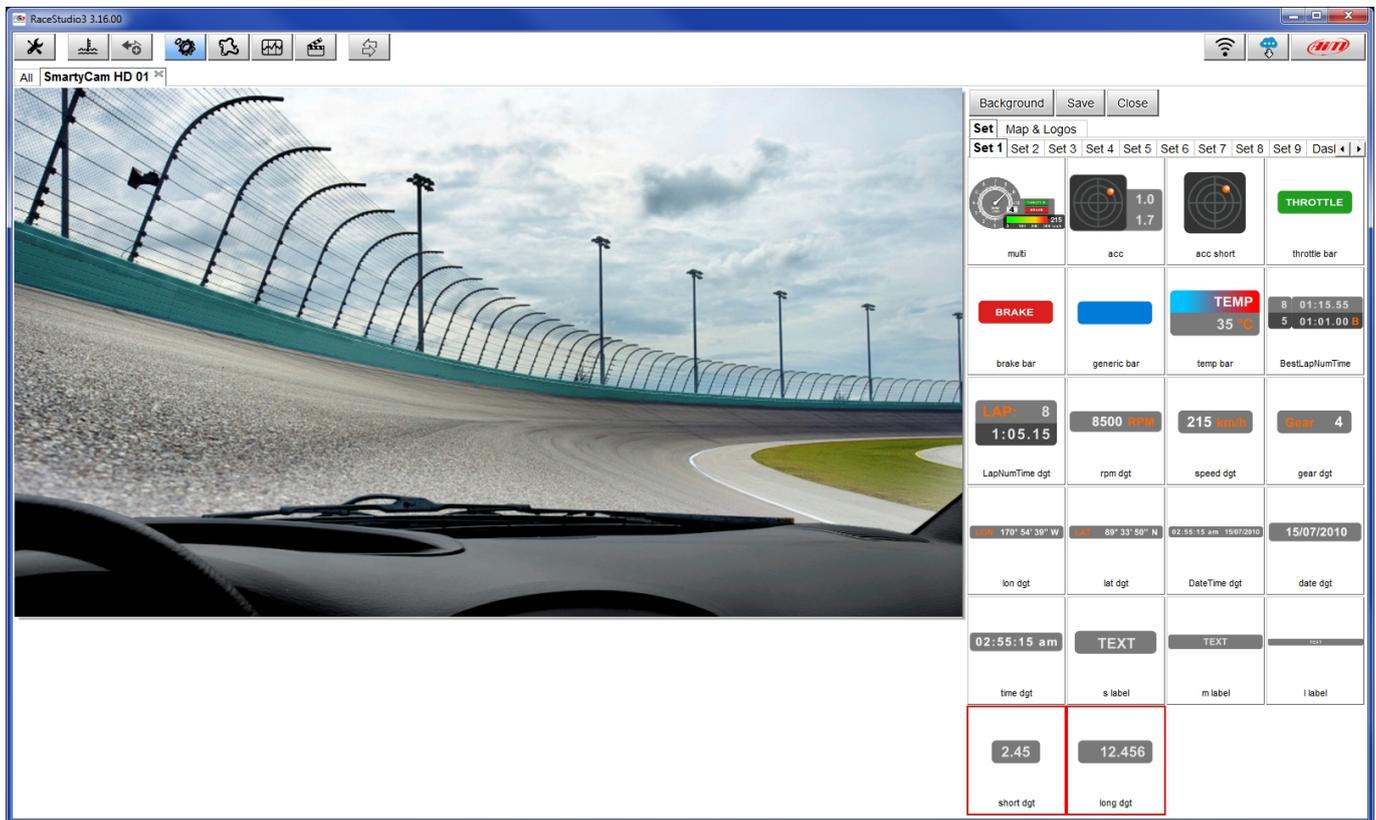

## Expansions

Drag and drop it to the desired position. In order to assign the lambda value to that overlay, open the drop-down menu clicking "Battery Voltage" and choose "Lambda". When this operation is done, click "Transmit" to send the configuration to the camera.

The screenshot shows a configuration window with a table of parameters. A dropdown menu is open for the 'Function' column, showing a list of available sensors. The 'Lambda' option is highlighted. A red line indicates the selection path from the dropdown to the 'Function' column header.

short dgt	long dgt	Function	Unit	Scale
12.456		Battery Voltage	V	

- Battery Voltage
- Brake Pos
- Brake Press
- Clutch Pos
- Exhaust Temp
- Fuel Level
- Head Temp
- Lambda**
- Lateral Accel
- Inline Accel
- Oil Press
- Oil Temp
- Speed
- Engine RPM
- Steering Pos
- Throttle Pos
- Water Temp