

## Race Studio 2

## Show/hide "Show date and time" for each lap

**Question:**

How does "Show date and time" for each lap work?

**Answer:**

Starting from Race Studio 2.56.02, Race Studio Analysis can show "Start time and date" for each lap aside "time from beginning". This option is enabled by default. If you want to come back to Race Studio Analysis previous settings disable it this way:

- run Race Studio Analysis
- open your test
- go to "Lap Manager" view
- click the wrench icon
- uncheck "Show date and time aside of the time from beginning"
- click "OK"

The screenshot shows the Race Studio Analysis software interface. The main window displays a table of lap data for a test named "1 - AIM - SuperKart". The table has columns for Index (Idx), Lap time, % on r..., Time from beginning, Start Time Date, Lap cause, Split 1, Split 2, Split 3, and GPS Lap Insert. The data rows show lap times ranging from 00.03.496 to 00.13.498. A dialog box titled "Set Lap View" is open in the foreground, with the checkbox "show date and time aside of time from beginning" checked. Other options in the dialog include "Automatically disable all laps not coming from a lap marker" and "View only performance laps". The "Lap Manager" tab is selected in the bottom navigation bar, and a red box highlights it. The "Measures and laps" panel on the left shows various performance metrics like Engine [rpm], Speed [km/h], and GPS data.

Idx	Lap time	% on r...	Time from beginning	Start Time Date	Lap cause	Split 1	Split 2	Split 3	GPS Lap Insert
1	00.03.496		Sat, Oct 21, 2006 04:19:35 PM	Sat, Oct 21, 2006 04:19:35 PM	(Vehicle stop)				
2	02.32.667								
3	02.09.210	103.03 %							
4	02.06.650	100.99 %							
5	02.06.597	100.95 %							
6	02.05.410	Reference							
7	02.06.680	101.01 %							
8	02.06.483	100.86 %							
9	02.06.836	101.14 %							
10	01.27.103								
11	00.13.498								