## AiM Firmware Documentation





## How to install MXG updates

 $\label{lem:continuous} Unzip the MXG\_MXL2\_Upgrade\_XX.XX.XX and launch MXG\_Upgrade. exe directly from the folder where you have unpacked it. \\ Do not move any of the contained folders.$ 

Press "TX whole SD" and the firmware will be loaded into the MXG.

The red alarm 1 will blink fast. After rebooting, the blue alarms 1 and 2 will blink fast.

Afterwards the system will be updated.