



How to install MXL2 updates

Unzip the MXG_MXL2_Upgrade_XX.XX.XX and launch MXL2_Update.exe directly from the folder where you have unpacked it. Do not move any of the contained folders.

Press "TX whole SD" and the firmware will be loaded into the MXL2.

The red alarm 1 will blink fast. After rebooting, the blue alarms 1 and 2 will blink fast.

Afterwards the system will be updated.