

**EFI Europe**  
**Euro 4\_132 ECU**



## INTRODUCTION

AIM has developed special applications for many of the most popular ECUs: by special applications we mean user-friendly systems which allow to easily connect your ECU to our high tech data loggers: user needs only to install harness between the **logger** and the ECU.

Once connected, the logger displays (and/or records, depending on the logger and on the ECU data stream and configuration) values like RPM, engine load, throttle position (TPS), air and water temperatures, battery voltage, speed, gear, lambda value (air/fuel ratio) analog channels...

All AIM loggers include – free of charge – **Race Studio 2** software, a powerful tool to configure the system and analyze recorded data on your PC.

**Warning: once the ECU is connected to the logger, it is necessary to set it in the logger configuration in Race Studio 2 software.  
Select Manufacturer “Efi” Model “Euro\_4\_132”.  
Refer to Race Studio Configuration user manual for further information concerning the loggers configuration.**

## INDEX

Chapter 1 – Technical communication notes .....	3
1.1 Hardware check .....	3
1.2 – Software setup and firmware check .....	3
Chapter 2 – CAN communication Setup .....	6
Chapter 3 – Connection with AIM loggers .....	6
Chapter 4 – Euro_4_132 communication protocol .....	7

## Chapter 1 – Technical communication notes

EFI “Euro 4\_132” can communicate with AIM loggers through the CAN bus. This communication can be wrong due to different reasons related to hardware, software or firmware.

### 1.1 Hardware check

EFI CAN line works normally with two only wires: CAN High (corresponding to AIM CAN+) and CAN low (corresponding to AIM CAN-). Generally AIM loggers do not need to ground CAN line. To check if hardware is ok:


- ensure that a 120 Ohm “end-line resistor” is installed between CAN+ and CAN-; use a multimeter; disconnect AIM logger from the ECU and make this check on both sides (ECU and logger);
- check if amplitude of each bit is 2V (or at least 1.8V); using a scope ground the probe of CAN- while measuring CAN+. Please ensure that no filtering feature is enabled on the scope: this because of high baud rate of this line.

### 1.2 – Software setup and firmware check


EFI “Euro 4\_132” ECU has a CAN line to export data to a data logger.

To configure EFI “Euro 4\_132” ECU:


- run “ECT Mod” software
- load an “Euro 4\_132” ECU
- click “Map Editor”
- click Map Manager and select “ECU Setup Map”

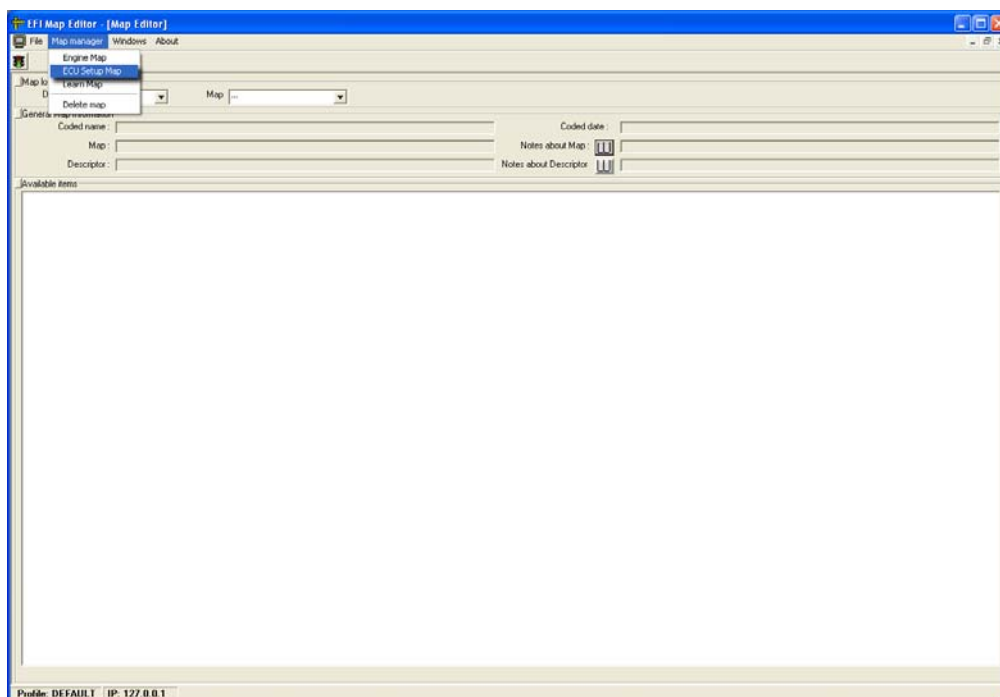


- Click File and select “Load from file” option.

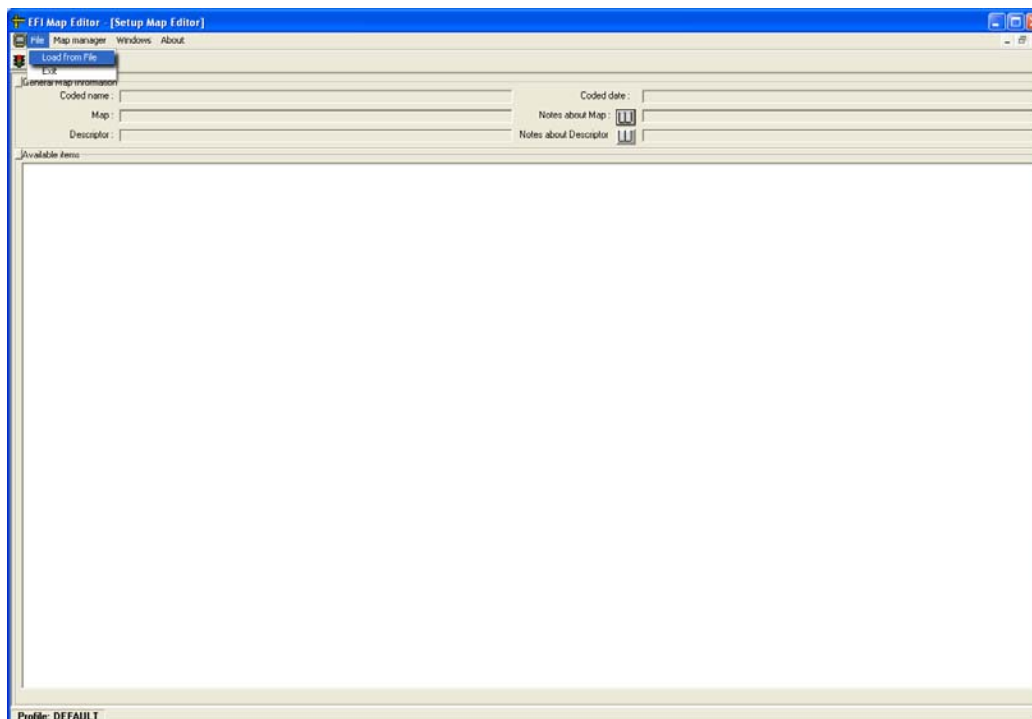

- Select the “.ECF” file;
- select the “.CDS” file.
- the map is loaded
- select “System setup – data export” option

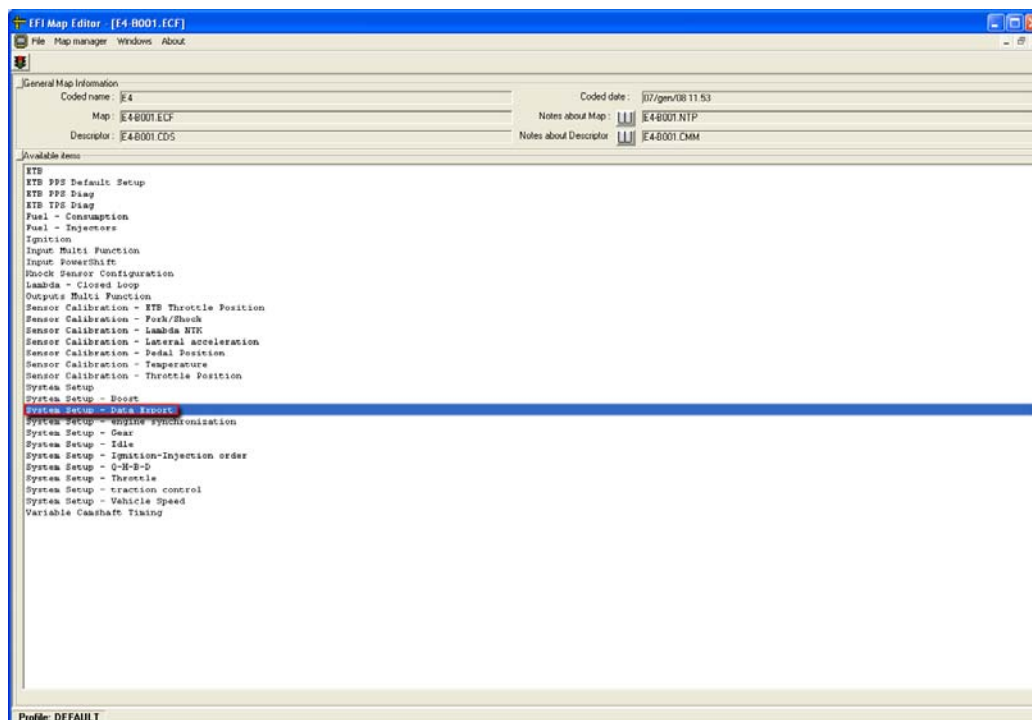

- Data export table is loaded.

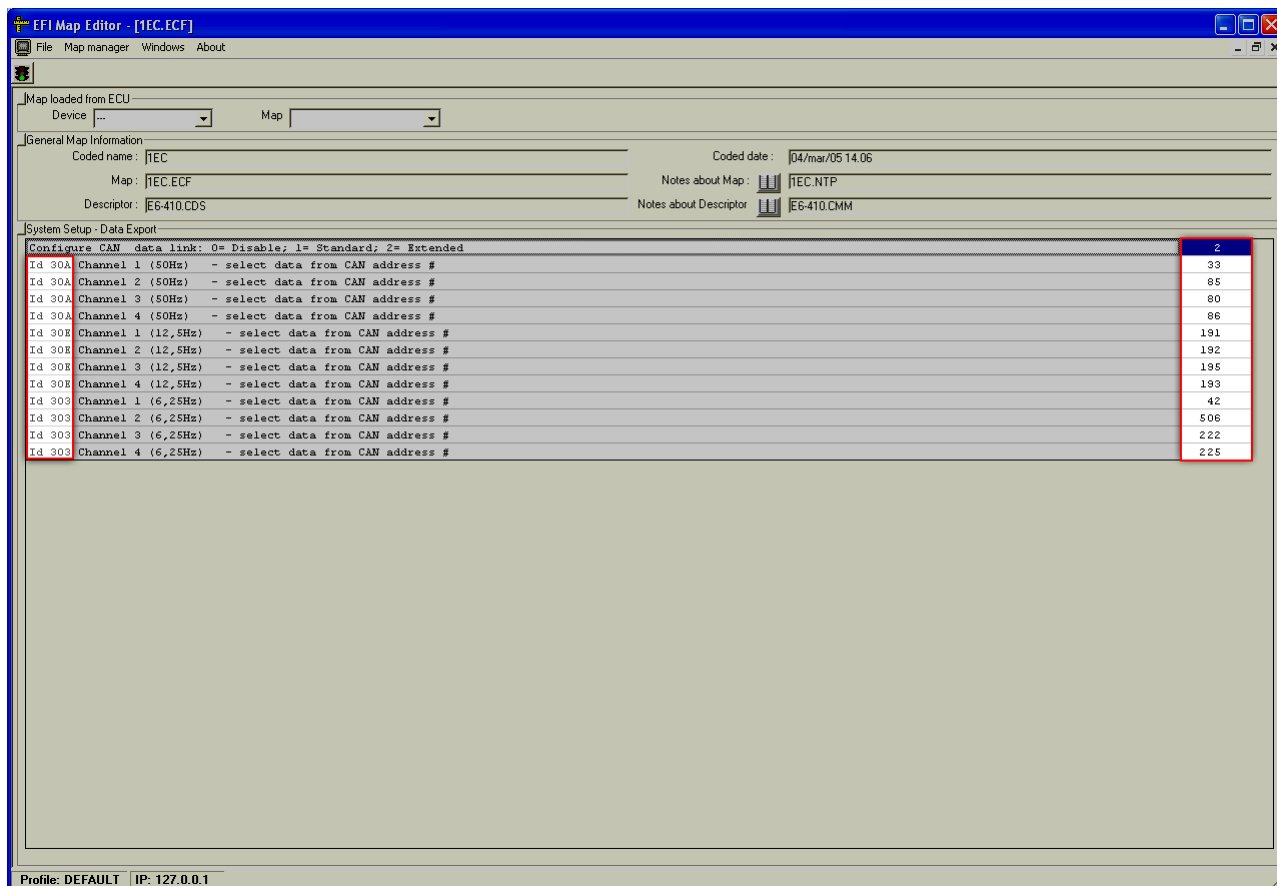

With reference to the image here above: the **first row** ha to be set to “**2 =Extended.**”  
**All other values** have to be set as follows:


ID	Value
30A	33
30A	85
30A	80
30A	86
30E	191
30E	192
30E	195
30E	193
303	42
303	506
303	222
303	225

Please ensure that the logger connected to the ECU is upgraded at the latest firmware version and has been configured with the latest Race Studio 2 version.

## Chapter 2 – CAN communication Setup

EFI Euro\_4\_132 ECU is equipped with a CAN communication setup used to communicate parameters to an external logger.

The image here below shows the standard CAN communication setup.

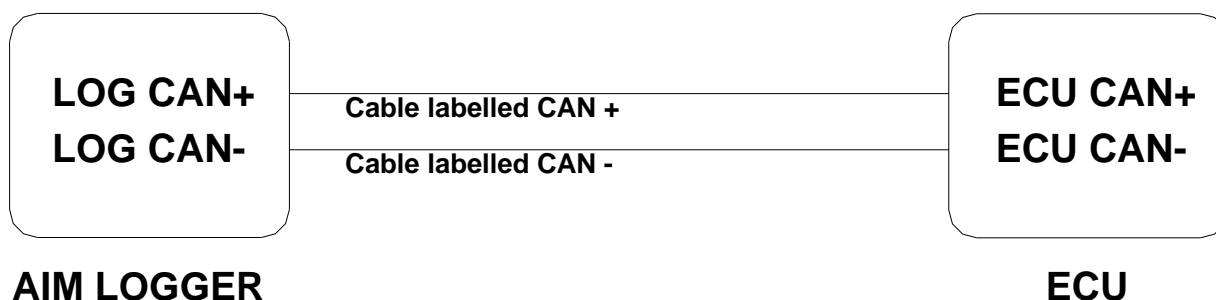

## Chapter 3 – Connection with AIM loggers

EFI “Euro 4\_132” ECU is equipped with two male connectors. The CAN bus is on the right one (CNR). To connect AIM logger to the ECU:

- connect AIM cable labelled “CAN+” to pin F3 of the right connector;
- connect AIM cable labelled “CAN-” to pin E4 of the right connector.



## Chapter 4 – Euro\_4\_132 communication protocol

Channels received by AIM loggers connected to EFI “Euro 4\_132” ECU are:

ID	CHANNEL NAME	FUNCTION
ECU_1	EFI_RPM	RPM
ECU_2	EFI_TPS	Throttle position sensor
ECU_3	EFI_WHEELSPD	Driven wheel speed
ECU_4	EFI_DRAXSSPD	Driving wheel speed
ECU_5	EFI_GEAR	Engaged gear
ECU_6	EFI_SELEPROMTAB	Selected Engine Map
ECU_7	EFI_ECT	Engine cooling temperature
ECU_8	EFI_OILTEMP	Oil temperature
ECU_9	EFI_NTK1	Lambda value 1
ECU_10	EFI_FUELPRESS	Fuel pressure
ECU_11	EFI_OILPRESS	Oil pressure
ECU_12	EFI_LNR2L	Analogic linear input 2
ECU_13	EFI_LNR1L	Analogic linear input 3
ECU_14	EFI_TC_CUT_LEV	Advance cut (for traction control)
ECU_15	EFI_TC_TRIM	Slip multiplier (for traction control)
ECU_16	EFI_BATTVOLT	Battery supply