## AiM Infotech

# Nissan 370Z

# Release 1.02







This tutorial explains how to connect Nissan cars to AiM devices.

1

# Supported model and years

Supported model and years are:

Nissan 370Z

from 2009 onwards

2


# Wiring connection

Nissan 370Z features a bus communication protocol based on CAN on the OBDII plug located in the left side of the car cockpit as shown here below.





Connector pinout as well as connection table are shown here.

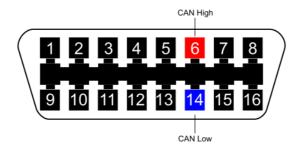

| OBDII connector pin | Pin function | AiM cable |
|---------------------|--------------|-----------|
| 6                   | CAN High     | CAN+      |
| 14                  | CAN Low      | CAN-      |

3

# AiM Logger configuration

Before connecting the ECU connected to AiM device set it up as follows:

Run Race Studio 2 software and follow this path:

- Device Configuration -> Select the device you are using;
- select the configuration or press "New" to create a new one;
- select ECU manufacturer "Nissan" and ECU Model "370Z";
- transmit the configuration to the device pressing "Transmit".



4

## Available channels

Channels received by AiM loggers connected to "Nissan" "370Z" protocol are:

| ID     | CHANNEL NAME | FUNCTION                   |
|--------|--------------|----------------------------|
| ECU_1  | Z_RPM        | Engine speed sensor        |
| ECU_2  | Z_VEH_SPEED  | Vehicle speed              |
| ECU_3  | Z_SPEED_FR   | Front right wheel speed    |
| ECU_4  | Z_SPEED_FL   | Front left wheel speed     |
| ECU_5  | Z_SPEED_RL   | Rear left wheel speed      |
| ECU_6  | Z_SPEED_RR   | Rear right wheel speed     |
| ECU_7  | Z_BRAKE_POS  | Brake position             |
| ECU_8  | Z_BRAKE_SW1  | Brake switch 1             |
| ECU_9  | Z_BRAKE_SW2  | Brake switch 2             |
| ECU_10 | Z_ECT        | Engine coolant temperature |
| ECU_11 | Z_LOW_OILP   | Low oil pressure           |
| ECU_12 | Z_PPS        | Pedal position             |
| ECU_13 | Z_TC_OFF     | Traction control OFF       |
| ECU_14 | Z_DIFF_CTRL  | Differential control       |
| ECU_15 | Z_ACC_LAT    | Lateral accelerometer      |
| ECU_16 | Z_ACC_LONG   | Longitudinal acceleration  |
| ECU_17 | Z_STEER_ANG  | Steering angle             |
| ECU_18 | Z_STEER_SPD  | Steering wheel speed       |

**Please note**: channels listed above are those polled by AiM devices. They may or may not come across in the data stream depending on models. RPM, TPS,ECT and speed are generally available.